



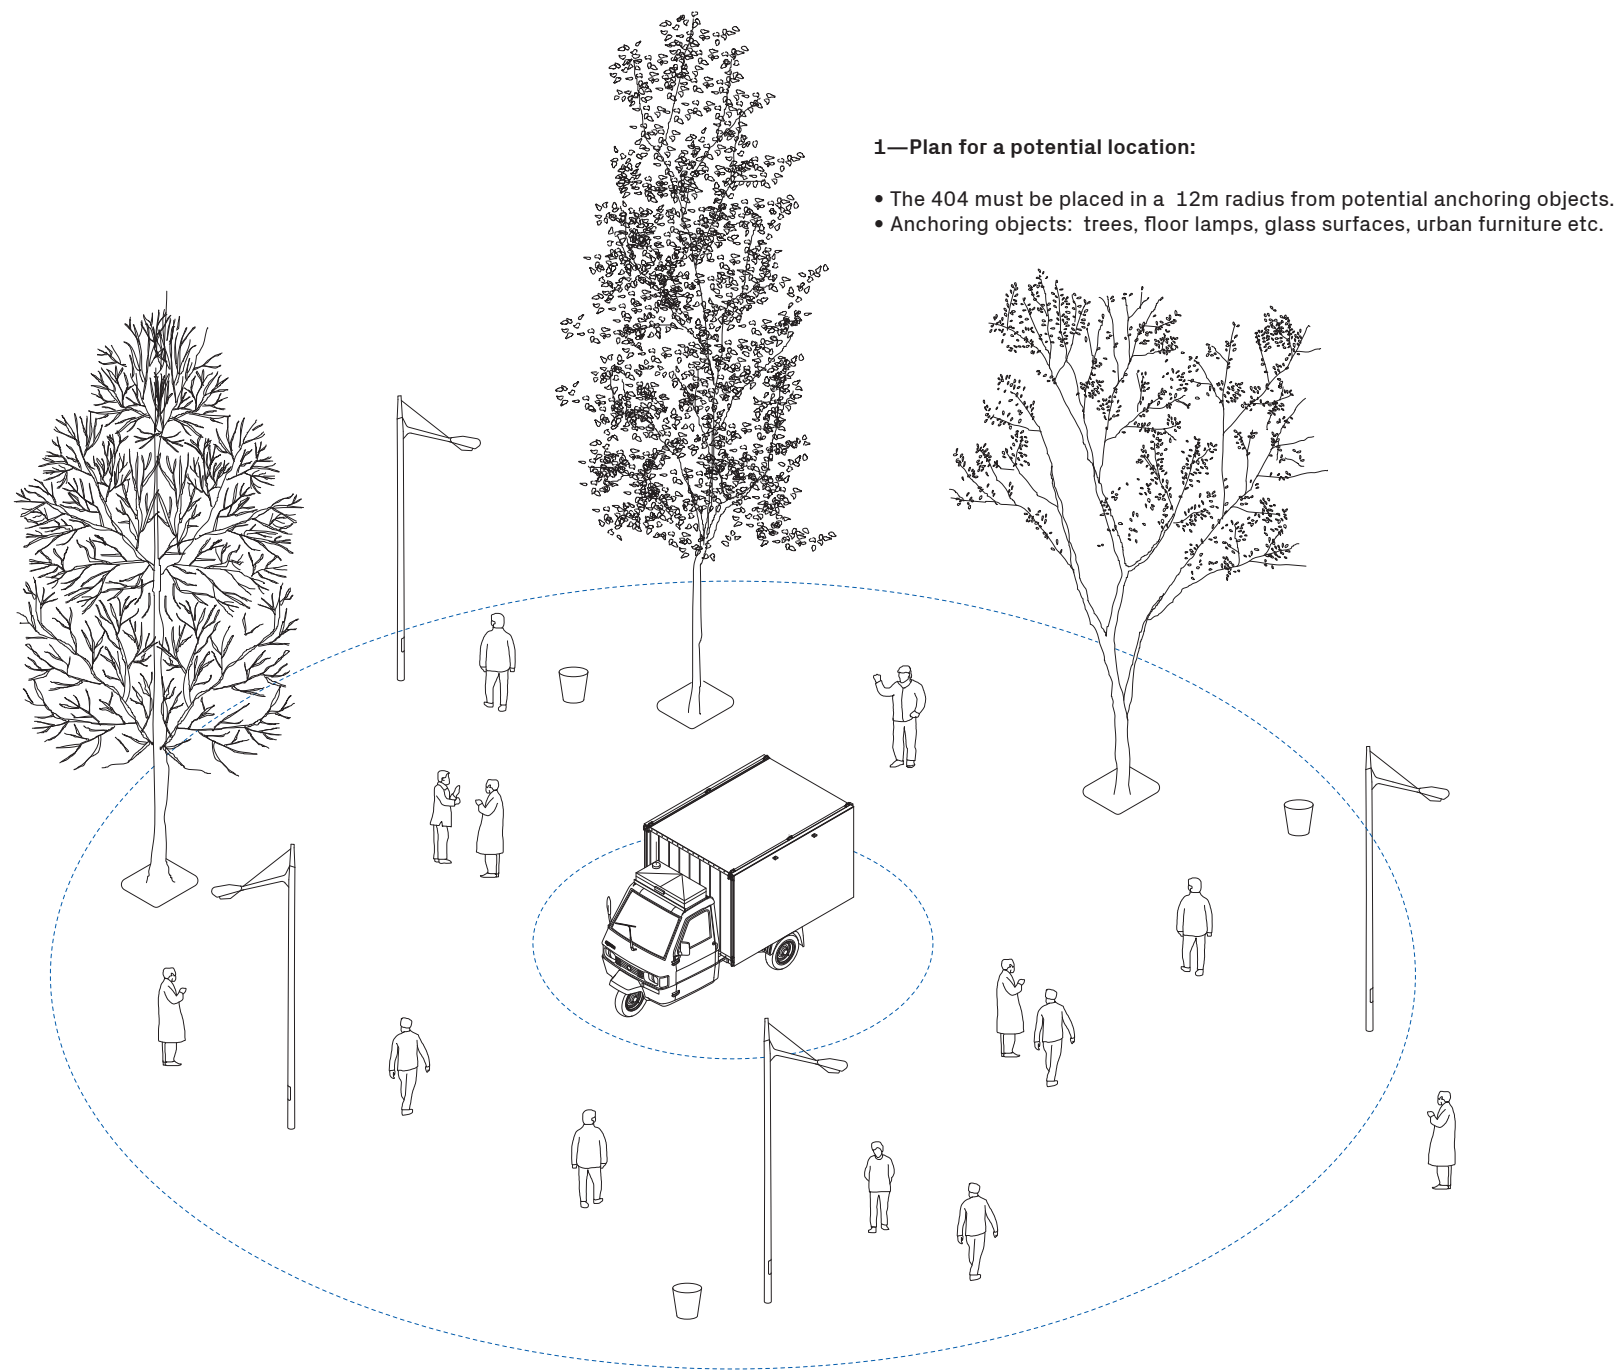


The installation of a 404 unit is designed to be achieved in around 30-45 min by a team of two people, the APE being a two-seat vehicle. All the necessary materials for installation, the foldable furniture and the EMF tent are stored in the cabin during "stealth mode" and transport phases

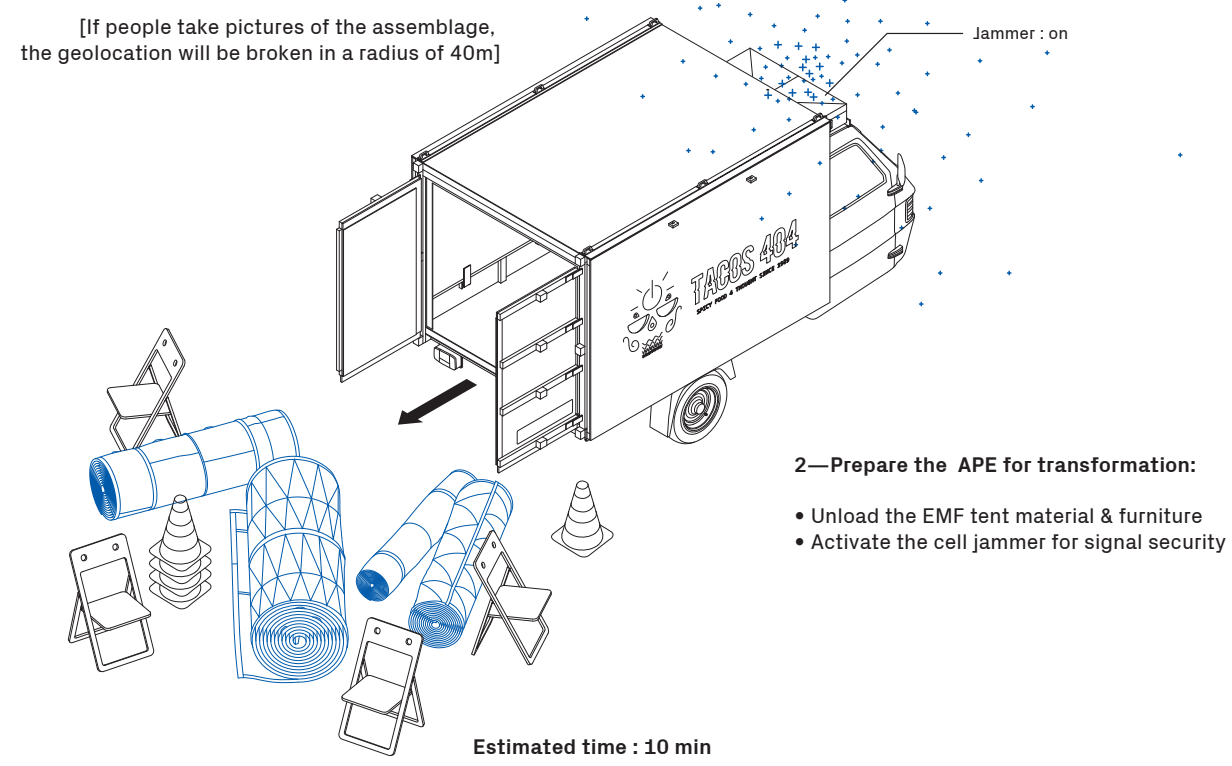


3—Deploy the "Cabin" in vertical mode

- Place the APE perpendicular to the selected anchoring points.
- Unlock and rotate the Cabin: two people are needed.


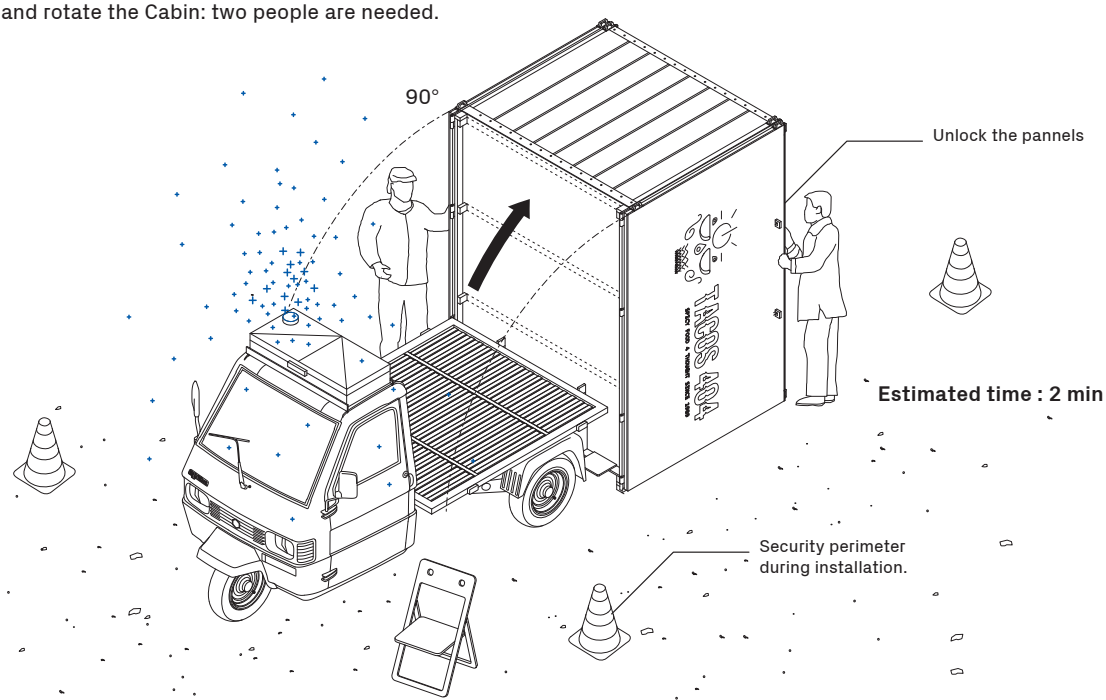


Estimated time : 2 min

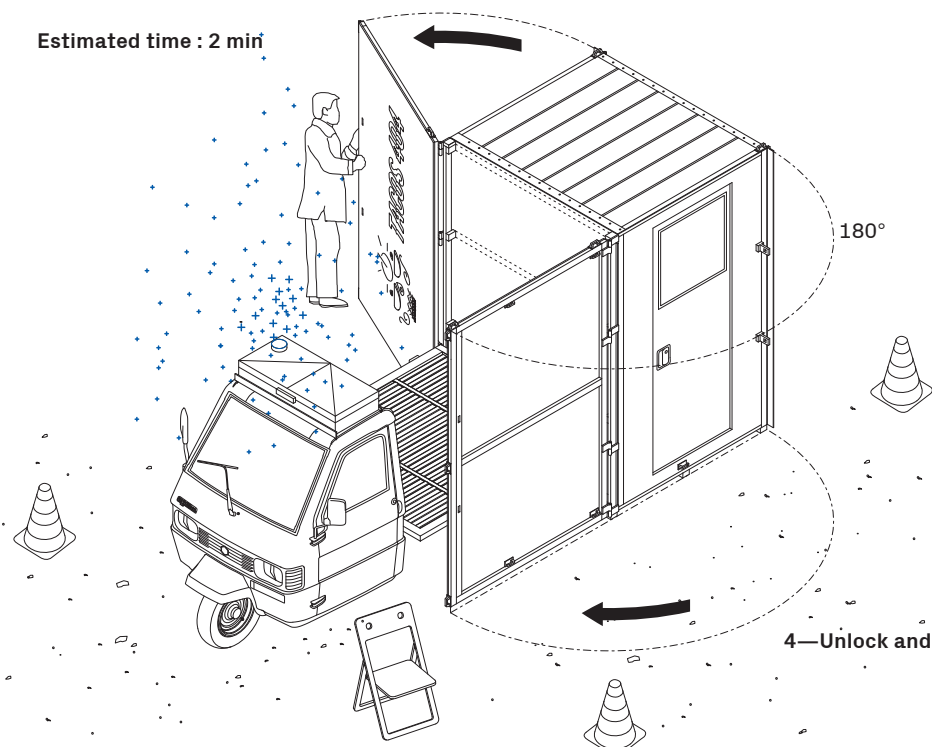


5—Deploy the lateral panels to full length

- The security mechanism stops the frame at 320 cm

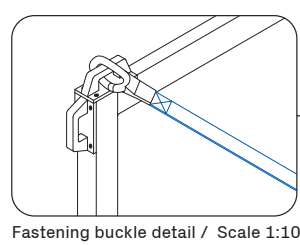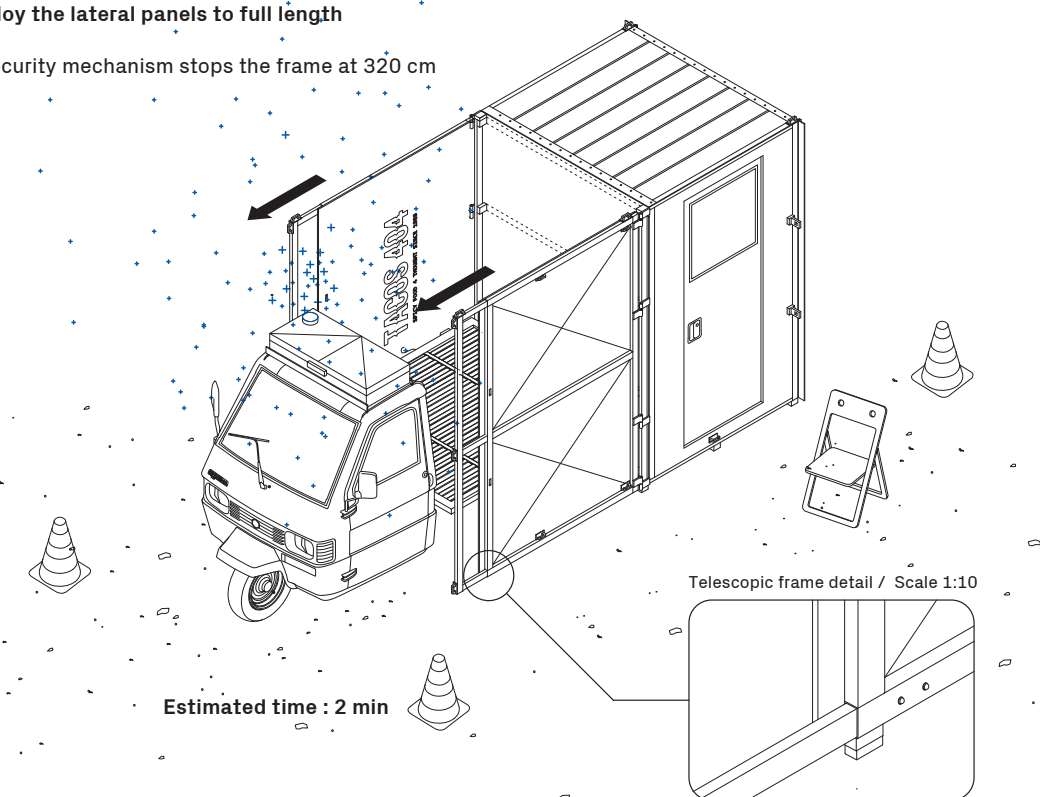


6— Stabilize the Cabin frame

- Tie and secure the two lateral panels with the 25mm straps.
- The strap tension will create a braced structure ready to host the tent.

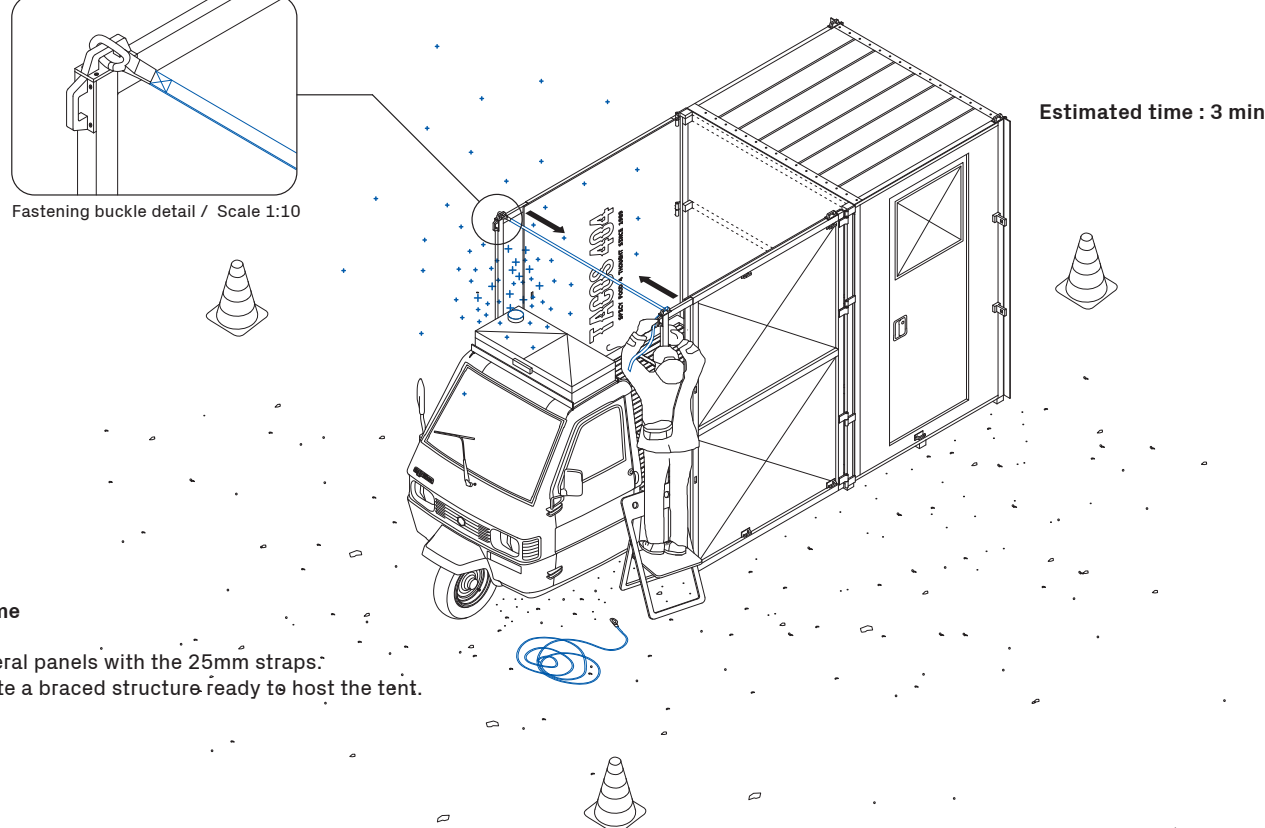

Estimated time : 10 min

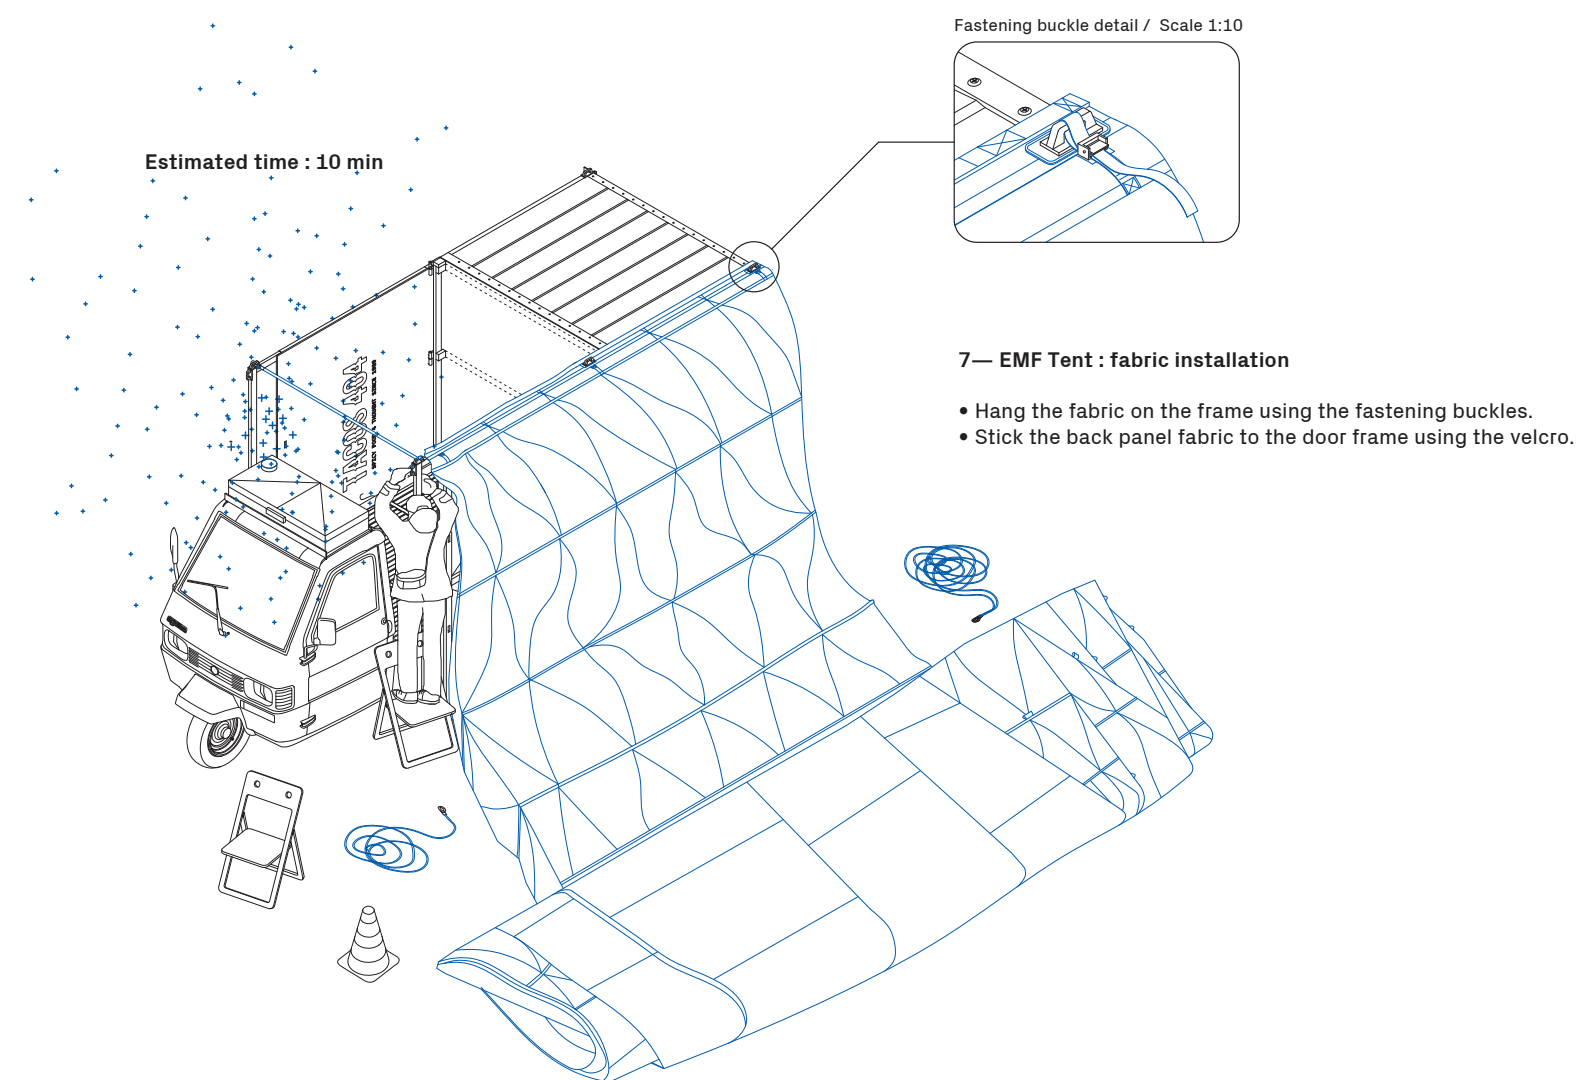

8— Final EMF Tent mounting & use

- Unroll carefully the fabric on the ground before tension.

